

The Margarita Guys



Frozen Delight - Delivered Just Right!

877-99FIESTA

Easier Machine Cleaning

When you are done with the Ultra or CDS machine after an event or during your regular cleaning cycle, when you drain the hoppers of product using the facet before removing them for cleaning, the least product left in the hopper makes for the easiest and fastest cleanup.

The hoppers sit in an “Upper Drip Tray” that is designed to catch condensation from the sides of the tank that occurs during use and route it through a drain hose to the lower drip tray. (The little hole in the front of the upper drip tray is the drain). Similarly, when cleaning up, when you remove the hopper any remaining product will be caught by this upper drip tray and be drained to the lower drip tray (which can be easily removed and emptied.) But since these trays have limited capacity, it is best to remove the hoppers after as much product as possible has been drained through the faucet.

We have found that permanently raising the rear legs of the machine about 3/8” higher than the front will make the hopper drain more completely through its faucet without negatively impacting the operation or use of the machine. This can be accomplished by simply unscrewing the adjustable foot portion from the upper portion of the rear legs. Then, when you remove the hopper, there will be much less product to mop up.

Jeff

ask@margaritaguys.com

<http://www.margaritaguys.com/>